Safety regulations

ADMIRAL Couplers can only be installed or used by competent and/or qualified personnel.

Before using a Coupler you should inspect them visually for any damage. If the coupler is damaged you should be taking it out of service and return it to your local ADMIRAL dealer for inspection.

ADMIRAL Coupler RIHAHCA48 is designed to specifically attach to round tubes of ø 48-51mm and is forbidden to be used in falsework structures.

During installation of the Coupler you must take care not to overtighten the wing nut or wing handle. This to prevent damage to the tube and/or the Clamp/Coupler. If you use only one wing nut or wing handle, it is preferred to only hand tighten it. When you use an additional nut, below the wing nut or wing handle, follow this torque setting: Max. 22-25 N-m.

ADMIRAL Coupler RIHAHCA48 comes with an indicated WLL of 200kg. This WLL may not be exceeded or any other max. load given as instructed during installation.

Couplers that are being used in combination with accessories, should never exceed the max. load of the used accessory.

Always make sure you double lock the ADMIRAL Couplers, with e.g. two nuts.

Half coupler 48-51mm lifting eye **ADMIRAL CODE:** RIHAHCA48 EAN

A product of ADMIRAL Josink Kolkweg 10, 7545 PR Enschede The Netherlands, +31 534 301 201



USER MANUAL



Half coupler

48-51mm lifting eye



www.admiralstaging.com



