


NEXT
audlocom

TRÉND

USER MANUAL

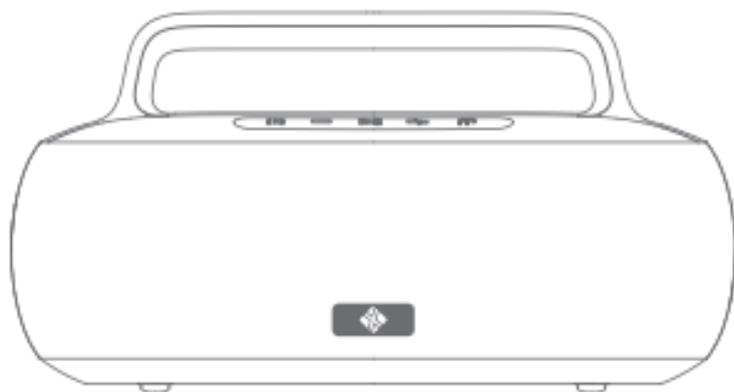

Portable Outdoor Wireless Speaker

EN

PACKAGING CONTENTS



IPX6 Portable Wireless Speaker



USB-C
Charging Cable



User Manual





3.5mm Jack
Audio Cable

Hereby, CVA ELECTRONICA, LDA declares that this equipment type is in compliance with the mandatory directives for the CE certification. The full text of the EU declaration of conformity is available at the following internet address:

www.nextaudiogroup.com/en/apoio-ao-cliente/downloads

TRÉND OVERVIEW

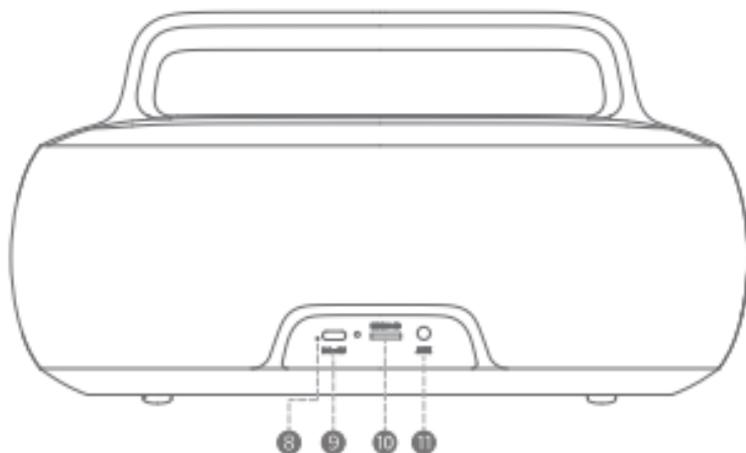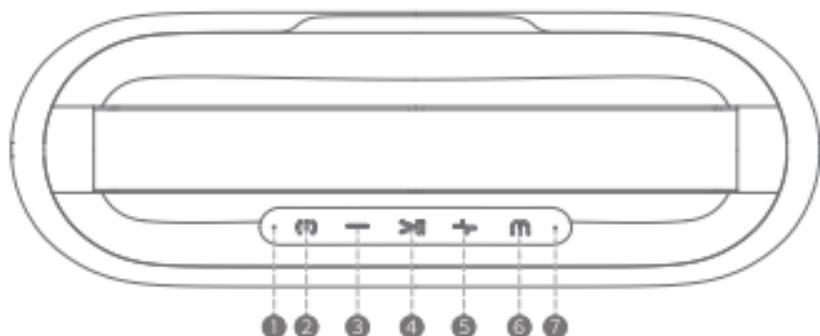

- | | |
|-----------------------------|--------------------------|
| ❶ Status Indicator LED | ❸ Mode Button |
| ❷ On/Off Switch | ❹ Built-in Microphone |
| ❸ Volume - (Previous Track) | ❺ Charging Indicator LED |
| ❹ Play/Pause | ❻ USB-C Charging Port |
| ❺ Volume + (Next Track) | ❼ Micro SD Card Slot |
| | ❽ AUX Input |

POWER ON/OFF

1. Long press the power switch for 2 seconds to turn on, the LED indicator flashes blue.
2. Long press the power switch for 2 seconds to turn off, the LED status indicator goes off.

BT WIRELESS CONNECTION

1. Switch to BT (Using the mode button), the LED indicator flashes blue continuously while waiting for pairing.
2. Then, activate the BT of your mobile device and search for "NEXT TREND". Click to connect. If the connection is successful, the LED indicator will turn solid blue.
3. The speaker automatically reconnects to the last paired device when both devices are close to each other.

UNPAIR BT DEVICE

Double press the mode button to unpair the previously paired BT devices. The status LED will flash blue searching for a new device to pair.

ANSWERING INCOMING CALLS

Short press the Play/Pause button to answer incoming calls.

END CURRENT CALL

Short press the Play/Pause button once to end the current call.

REJECT INCOMING CALL

Long press the Play/Pause button for 2 seconds to reject the incoming call.

LAST NUMBER REDIAL

Double press the Play/Pause button to redial the last called number.

OPERATING MODE

Short press the Mode button to select the desired operation mode - BT / Micro SD card / AUX in. The Micro SD Card allows MP3 music format and a maximum storage of 32Gb.

VOICE ASSISTANT

Long press the Play/Pause button to activate your mobile voice assistant.

MUSIC PLAYBACK

1. Short press the Play/Pause button to pause or play
2. Long press the "-" to select previous track
3. Long press the "+" to select next track
4. Short press the "-" to decrease the volume level
5. Short press the "+" to increase the volume level

TWS (TRUE WIRELESS STEREO)

You can connect two TRĒND speakers wirelessly, using BT only.

1. Make sure the BT function is OFF on your mobile device.
2. Turn on the two TRĒND speakers.
3. Long press the mode button on both speakers for 8 seconds, then there comes up a tone meaning both speakers are now in TWS mode.
4. Activate the BT of your mobile device and search for "NEXT TRĒND". Click to connect.

CHARGING THE PORTABLE SPEAKER

1. As the speaker has a built-in, non-removable and rechargeable battery, please use the provided USB-C cable to charge it.
2. The charging voltage and current is 5V/2.4A. Please charge the TRĒND with an input power equal or below 12W (2.4A).
3. Fully charge the speaker before the first use. It takes around five hours to charge for the subsequent use.
4. During charging, the LED lights up red, and goes off upon charging is completed.
5. The battery performance may decrease with increasing number of charging cycles and natural battery aging.

TECHNICAL SPECIFICATIONS

FR Driver: 2 x 75mm Full-Range Driver

SW Driver: 2 x 82mm Passive Sub. Radiator

RMS Power: 30W

Frequency Response: 80Hz - 16kHz

BT Technology: v5.0

BT Range: Up to 18m

Audio Inputs: Stereo BT, 3.5mm Stereo Jack,
MicroSD Card

IP Rating: IPX6

Battery Type: 18Wh Lithium-ion (Equivalent to
3.6V, 5000mAh)

Battery Play Time: Up to 15 Hours

Battery Charge Time: 5 Hours

Charging Voltage/Current: DC 5V/2.4A

Dimensions (WxHxD): 300 x 160 x 102mm

Net weight: 1.34kg

CORRECT DISPOSAL

When the TRĒND is to be definitively discarded, take the product to a local recycling plant for a disposal which is not harmful to the environment. This equipment should not be treated as general household waste. Devices marked with this symbol must not be disposed of as household waste. For more information, please contact your retailer or local authorities.



WARNINGS

1. Please follow these instructions before use.
2. Do not immerse the speaker in any liquid. Any water damage won't be covered by warranty.
3. Please charge the speaker with a 5V/2.4A DC charger. Other chargers may damage the speaker.
4. Please store or use the speaker in a normal temperature environment (5°C to 25°C).
5. Please keep the speaker away from heat sources, such as radiators, hot air regulators, stoves, or other heat generating instruments.
6. Do not jam the in/out speaker ports, such as charger, microphone and audio jack.
7. In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long period of time.
8. If the equipment is not functioning properly or has been damaged in any way, switch it off immediately.
9. Do not open or try to service the equipment. It may only be repaired by authorized, qualified personnel.



 Rua da Venda Nova, 295 | 4435-469 Rio Tinto, Portugal

 info@nextaudiocom.com

 www.nextaudiocom.com

 [instagram.com/next.audiocom](https://www.instagram.com/next.audiocom)

 [facebook.com/nextaudiocom](https://www.facebook.com/nextaudiocom)