#### Safety regulations

ADMIRAL Couplers can only be installed or used by competent and/or qualified personnel.

Before using a Coupler you should inspect them visually for any damage. If the coupler is damaged you should be taking it out of service and return it to your local ADMIRAL dealer for inspection.

ADMIRAL Coupler RIHAHCA64 is designed to specifically attach to round tubes of ø 48-50mm and is forbidden to be used in falsework structures.

During installation of the Coupler you must take care not to overtighten the wing nut or wing handle. This to prevent damage to the tube and/or the Clamp/Coupler. If you use only one wing nut or wing handle, it is preferred to only hand tighten it. When you use an additional nut, below the wing nut or wing handle, follow this torque setting: Max. 22-25 N-m.

ADMIRAL Coupler RIHAHCA64 comes with an indicated WLL of 100kg. This WLL may not be exceeded or any other max. load given as instructed during installation.

Couplers that are being used in combination with accessories, should never exceed the max. load of the used accessory.

#### / WARNING

Always make sure you double lock the ADMIRAL Couplers, with e.g. two nuts.



# Swivel coupler 48-50mm slim





#### A product of ADMIRAL

Josink Kolkweg 10, 7545 PR Enschede The Netherlands, +31 534 301 201



#### **USER MANUAL**



## **Swivel coupler 48-50mm slim**





www.admiralstaging.com

#### Half coupler



Ø 32 - 35mm WLL 75kg











### Half coupler with lifting eye



#### Swiffel coupler







#### **ADMIRAL CLAMPS AND COUPLERS**

Admiral supplies a vast array of clamps and couplers from aluminum half couplers to swivel couplers with a WLL up to 750kg.





#### Selflock coupler





# G-clamp Ø 48 - 50mm 23cm/40cm/60cm







